


NOORUSE 1-144 RUUMITEHNIKA JUHEND

PROJEKTORI KASUTAMINE:

Ühenda lauapeal olev **HDMI** kaabel nimega **LAPTOP** sülearvutiga. Kui sülearvutil puudub HDMI pesa, siis ühenda sobiv üleminek **HDMI kaabliga**.

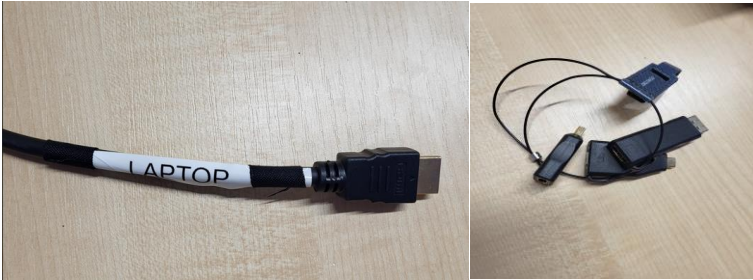

HDMI kaabel

Üleminekud

Lülita pulti **roheline** nupuga projektor sisse



Kui sülearvuti pilt mõne aja möödudes pärast nupuvajutust projektorisse ei ilmu, proovida klahvikombinatsiooni:



Projektor tuleb pärast kasutamist kindlasti välja lülitada, vajutades sedasama **roheline** nuppu, mis käivitamisel!

PROBLEEMIDE TEKKIMISEL:

Ühendust võtta Tartu Ülikooli Arvutiabiga.

737 5500 (5500)

arvutiabi@ut.ee


www.it.ut.ee



NOORUSE 1-144 EQUIPMENT USAGE INSTRUCTIONS

USING THE PROJECTOR:

Use the **HDMI** cable labeled with **LAPTOP** on the table to connect your laptop to the projector.

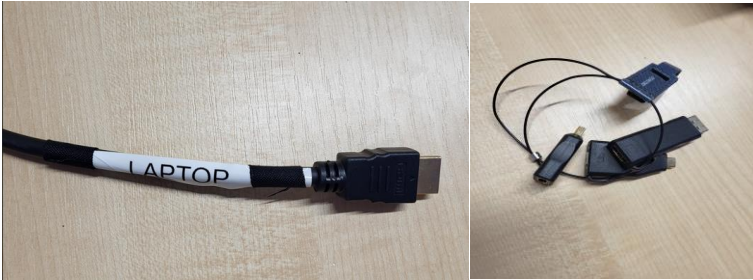

HDMI cable

Adapters

If the laptop doesn't have a or **HDMI** port, use the compatible adapters on the table.

Press the **green** button on the remote to turn on the projector.



If the laptop screen does not appear on the projector after pressing this button and waiting a while, press:



After using the projector be sure to turn it off by pressing the same **green** button as used to turn the projector on.

IF PROBLEMS OCCUR:

Contact with our Computer Helpdesk.

737 5500 (5500)

arvutiabi@ut.ee

www.it.ut.ee

